



PER DE CONTROLLATO
MONTARE R14 E R19

PER DE SEMPRE ATTIVO
MONTARE SOLO R18

Alimentazioni:

| | | |
|---|-------------------|----------|
| Lain Walter | | |
| File: 877-CPU.sch | | |
| Sheet: / | | |
| Title: Modulo CPU versatile con 16F877A - USB version | | |
| Size: A4 | Date: 22 mar 2009 | Rev: 2.3 |
| KiCad E.D.A. | | Id: 1/1 |